



## **INSTRUCTIONS AND USE FOR COMBO EXIT / EMERGENCY LIGHT**

**\*\*\*\*\*PLEASE READ ALL DOCUMENTATION BEFORE USE\*\*\*\*\***

**>>>> IMPORTANT INFORMATION CONCERNING BATTERIES<<<<**

The battery in this unit may not be fully charged. Before initial use the battery must be charge for a full 24 hours. If the unit remains unused for more than 15 days the battery must be fully recharged. To properly maintain the integrity of the battery the unit must be periodical charged or continually plugged in during long storage periods. Failure to maintain the battery charge may result in early battery failure which is not covered under warranty.

### **\*\*\*INSTRUCTIONS FOR USE \*\*\***

#### **Mounting the sign**

There are two wire rope loops located at the top of the unit. Use a suitable method of attachment such as tie wraps, picture wire, or S hooks to hang the exit sign.

>>Note: sign must be located in accordance with local fire /safety codes and laws. Please check with fire / safety inspectors for proper placement.

#### **Operation , Charging & Storage**

The Exit Sign comes equipped with a 120VAC polarized cord and plug. This unit must always be plugged into a polarized 120VAC receptacle. Do not defeat or modify the polarized plug in any way. Defeating or modifying the unit may cause a harmful safety situation and would violate safety codes.

**For Use:** Plug your exit Sign in. Flip the toggle switch (located on the top left side of unit ) to the ON / CHARGING position. The red AC indicator on the left side and the red letters "EXIT" should light up. This indicates that the sign is operational and the battery is charging. If the sign does not light up check that the switch is in the correct position and you have a proper source voltage.

The Exit Sign battery should be charged before use. Follow the recommendations below for charging.

- 1) Charge unit for 24 or more hours for initial use
- 2) Charge unit for 15 to 24 hours if unit has not been used in more than 15 days.
- 3) Charge unit for at least 2 hours before tent or event is occupied if unit was stored with a charge and or used within the past 15 days.
- 4) Charge unit for 24 or more hours if the units battery was discharged (operated on battery) for any reason or length of time.

**For Storage:** If storing the Exit Sign for less than 15 days flip the toggle switch (located on the top left side of unit ) to the OFF / STORAGE position. This prevents the battery from discharging. If storing the unit for longer than 15 days it is recommended that the unit be plugged in with the toggle switch in the ON/ CHARGING position. Keeping the battery charged will insure longer life.

**WARNING:** Ignoring proper procedures and cautions as described above will void all warranties and may cause a safety hazard. Please read all documentation and warnings before the Exit Sign is put into use.